

SurfaceFX_Sample_InternalLight



Sample that works with the 7000G2 series. No discrete IO required to control the light.

- Load job
- Verify the Internal light is selected under Light Control
- Make region adjustments for SurfaceFX.
- Save the job for your setup.
- Enable all cells based on Cell A31.
- Use the SurfaceFX image in cell A30, or any of the other images captured to complete your application setup.