

DataMan[®] Handheld WebUI

Reference Manual

2026 July 30

Revision: 26.2.0.20

Legal Notices

The software described in this documentation is provided "as is" and "as available," without warranty of any kind, express or implied, including but not limited to the warranties of merchantability, fitness for a particular purpose, and non-infringement. In no event shall Cognex Corporation and its global affiliates (collectively, "Cognex") be liable for any claims, damages, or other liability arising from, out of, or in connection with the software or your use of the software.

Your use of this software is governed by the full terms and conditions of the Cognex Software License Agreement. For complete licensing details and legal terms, please visit <https://www.cognex.com/terms-and-conditions>.

The information in this document is subject to change without notice and should not be construed as a commitment by Cognex. Cognex is not responsible for any errors that may be present in either this document or the associated software.

Companies, names, and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, nor transferred to any other media or language without the written permission of Cognex Corporation.

Portions of the hardware and software provided by Cognex may be covered by one or more U.S. and foreign patents, as well as pending U.S. and foreign patents listed on the Cognex web site at: cognex.com/patents.

In the event of any inconsistency between the English language version of this documentation and any other language version, the English language version shall take precedence.

Copyright © 2026. Cognex Corporation. All Rights Reserved.

The following are registered U.S. trademarks of Cognex Corporation:

2DMAX, 3D LIGHTBURST TECHNOLOGY, ADVANTAGE, ALIGNPLUS, ASSEMBLYPLUS, COGNEX, COGNEX VISION FOR INDUSTRY, CVL, DATAMAN, DVT, EASYBUILDER, EDGE INTELLIGENCE, HOTBARS, IDMAX, IN-SIGHT, LIGHTBURST, MX, OMNIVIEW, PATFIND, PATFLEX, PATINSPECT, PATMAX, PATMAX REDLINE, PATQUICK, POWERGRID, QUICKSORT, ULTRALIGHT, VISION SOLUTIONS, VISIONPRO, VISIONVIEW

The following are trademarks of the Cognex Corporation:

1DMAX, 3D SYMBOLIC LIGHT, 3D-LOCATE, 3DMAX, ONEVISION, PINPOINT, RANGEMAX, SLX, VIDI, OCRMAX, INSPECTEDGE, VISION SOLUTIONS

Portions copyright © Microsoft Corporation. All rights reserved.

Portions copyright © MadCap Software, Inc. All rights reserved.

Other product and company trademarks identified herein are the trademarks of their respective owners.

Symbols

The following symbols indicate safety precautions and supplemental information:

 **WARNING:** This symbol indicates a hazard that could cause death, serious personal injury or electrical shock.

 **CAUTION:** This symbol indicates a hazard that could result in property damage.

 **Note:** This symbol indicates additional information about a subject.

 **Tip:** This symbol indicates suggestions and shortcuts that might not otherwise be apparent.

Table of Contents

Legal Notices	2
Symbols	3
Table of Contents	4
Getting Started	5
About the DataMan WebUI	5
About This Release	6
Connecting to the DataMan WebUI	7
Home	9
Code Setup	11
Adjust Image	11
Read Setups for Different Applications	13
Symbolologies	14
Application Details	15
Data Validation	15
Data Formatting	17
Communications	23
Runtime	27
Settings	30
Overview	30
Configure Codepage	30
Licenses	31
Date & Time	32
Sound & Haptic	32
Password Protection	33
Turning on Password Protection	34
Locking the User Interface	34
Forgotten Password	34
Removing the Password	34
Network Settings	35
Firmware Update	35
Backup Device	36
Restore Device	36
Factory Reset	37
Device Log	37
Field Diagnostics	38
Reboot	39
Secure Connection	39
Image Viewer	40

Getting Started

This section provides general information about the DataMan WebUI.

About the DataMan WebUI

The DataMan WebUI provides an intuitive interface for managing your DataMan 8700 readers. The WebUI streamlines configuration and monitoring tasks. Key features include:

- Live code review: View real-time images of the codes being read by your DataMan reader directly within the WebUI.
- Unified platform: The DataMan 8700 WebUI is consistent across all models, simplifying deployment by consolidating common controls into a single page.
- Real-time impact: Explore how different options affect the reader or base station in real time.
- No additional downloads required: You no longer need to download and install additional software.
- Fast setup: Save time by not having to download and install software. Systems take just a few minutes to deploy.

You can access the WebUI from the following browsers:


- Google Chrome
- Microsoft Edge
- Apple Safari
- Mozilla Firefox
- Opera

The following table lists the models supported with the WebUI. The WebUI is supported for all DM8700 DX, DQ, HD, and LX models.

Model	Type		Communication
DMR-8700DX-USB	Corded reader with USB slide-in and power supply		USB A and C
DMR-8700DX-E	Corded reader with Ethernet slide-in		Ethernet
DMR-8700DX-B-USB	Bluetooth reader with USB base, battery and PSU	Note: Bluetooth readers must be paired with the base station to display the WebUI.	USB A and C
DMR-8700DX-B-E	Bluetooth reader with Ethernet base and battery		Ethernet

Note: The Bluetooth Direct Connect, RS-232, and Wi-Fi communication types are not supported with the WebUI.

You can access help information from the WebUI by clicking the Help (?) icon:

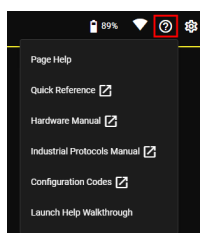

About This Release

This release focuses on introducing the WebUI, an easy User Interface for DataMan 8700 readers and making the setup time faster than before.

Connecting to the DataMan WebUI

Perform the steps described to connect to your DataMan 8700 WebUI. These steps apply to both Ethernet and USB readers.

Note: USB readers always receive a random link local IPv4 address automatically to connect with.

Turn on your handheld reader and connect it to a PC. There are two ways of connecting your reader to the WebUI: using MAC address or IP address.

MAC address

1. The MAC address can be found on the sticker of your reader:




2. Type in the MAC address into the web browser followed by `.local`. For example: `00D0243139DC.local`.

IP address


1. You can find the IP address on the OLED screen or in the Cognex Device Discovery Utility:
 - a. OLED screen: Turn on the reader by pressing one of the buttons on the back. Navigate to the left of the main screen.



- b. Cognex Station Manager: Additional software download needed, please see the [Cognex Support site](#) for more information. Use the Cognex Station Manager tool to connect to mycognex.com and register all your Cognex readers. You can manage all your readers, view and find the IP address on the network. Type the IP address directly into the search bar, or click **Connect**.

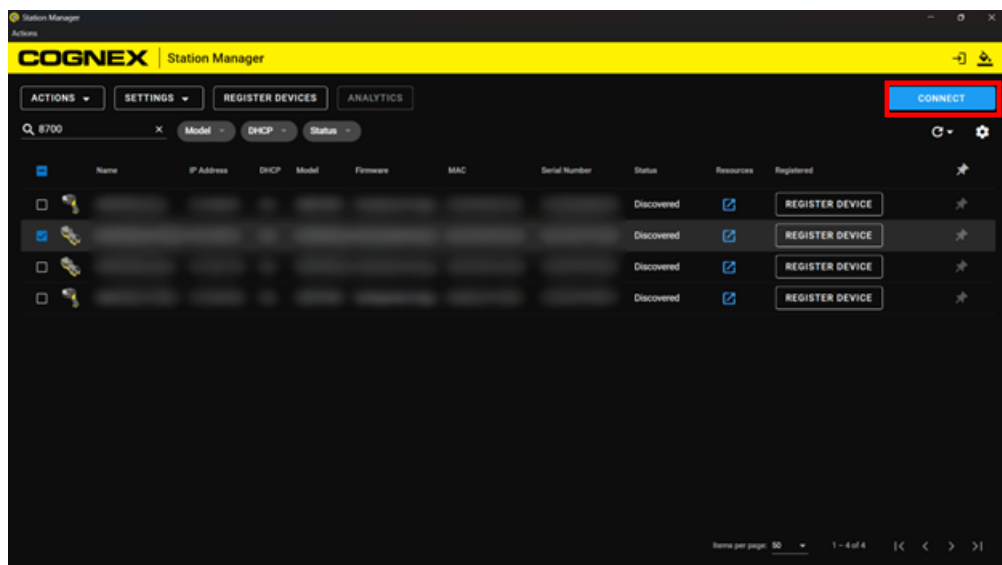


2. Type your IP address into the web browser: For example: 10.86.80.60

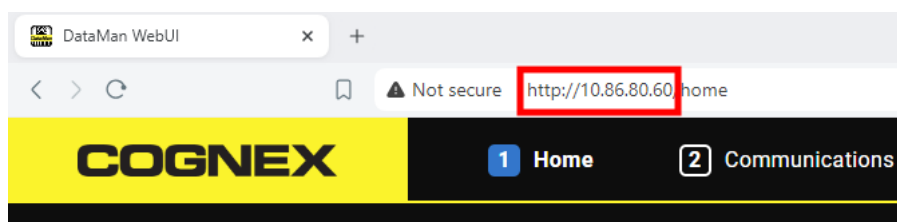

Home


The **Home** step provides an overview of your reader and serves as a central hub for reader management and configuration.

Note: For wireless readers, the reader tab is grayed out if the reader is out of range or not connected to the base station.

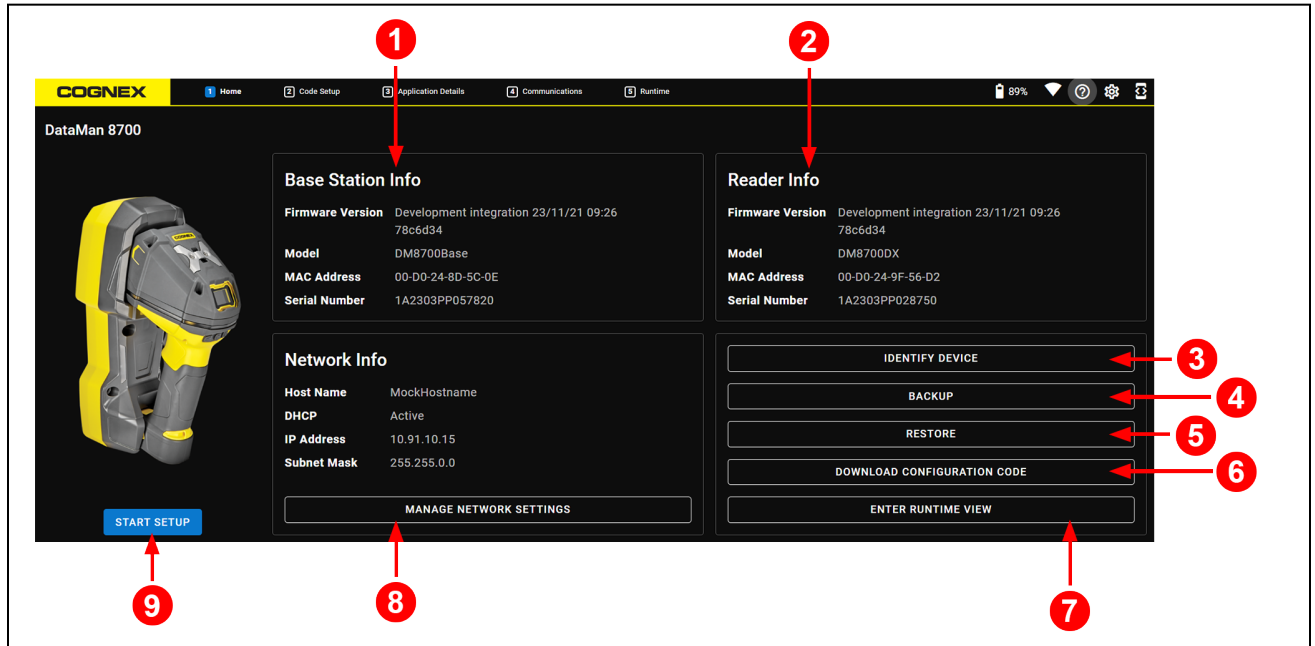

Number	Element
1	Information about the base station. Note: This panel is not present with corded readers.
2	Information about the reader.
3	The Identify Device button activates the ring light indicator of the reader.
4	The Backup button saves the configuration to a backup file.
5	The Restore button opens the window to upload the selected backup file.
6	The Download Configuration Code button downloads the current reader configuration as a 2D code.
7	The Enter Runtime View button takes you to the Runtime step, where you can see the reader reading barcodes in real time.
8	Information about the network. Click Manage Network Settings to open the connectivity settings panel.
9	The Start Setup button takes you to the Code Setup step where you can configure your code.

The top right corner has the following options:

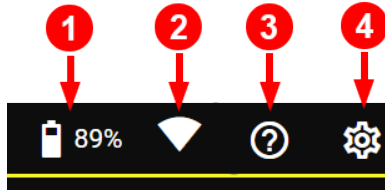

Number	Element
1	The battery percentage of your reader. Only available on Bluetooth models.
2	The wireless signal status. Only available on Bluetooth models.
3	The available help information, including page help and documentation.
4	The Settings panel.

Code Setup


In the **Code Setup** step, you can configure triggering, read setups, and the barcodes that your reader recognizes.

Adjust Image


In the **Adjust Image** substep, you can manually trigger the reader, change the trigger mode, and adjust the read setups.

By default, all read setups are enabled on the DM8700DX and DM8700W. On these readers, holding the trigger button makes all illumination (direct, polarized, and diffused) cycle through while scanning a code. The reader reads the code with the most suitable light for the particular code.

The DM8700HD, DM8700LX, and DM8700DQ models have one illumination and fixed focus lens, and therefore only support a single read setup.

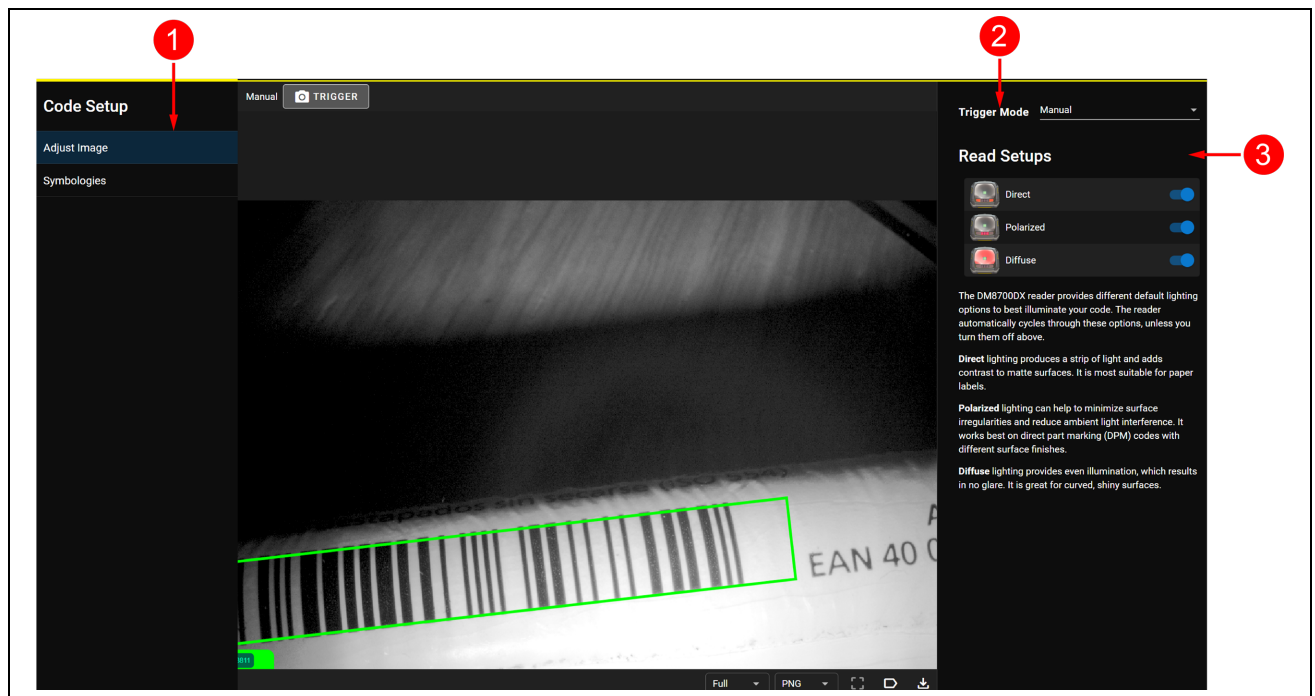


Number	Element
1	You can choose between the Adjust Image and Symbolologies substeps.

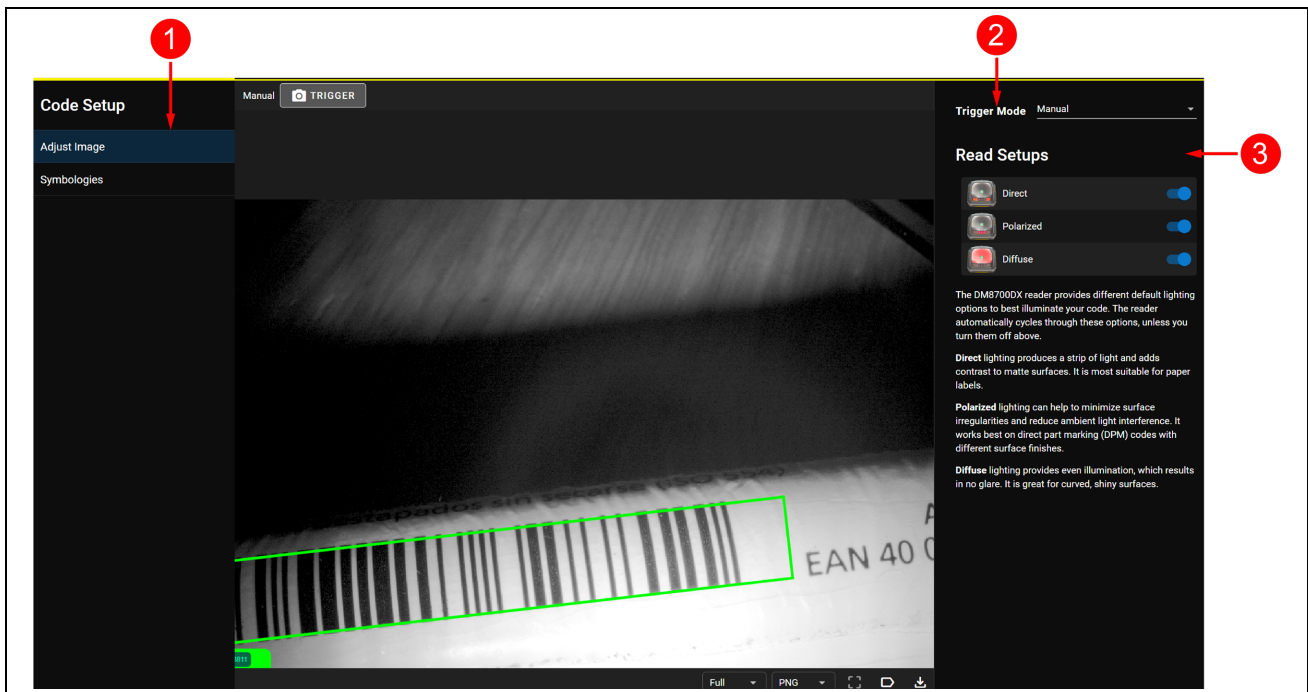


2

The following trigger modes are available:

- **Manual:** Read codes with the trigger of the reader or the **Manual Trigger** button on the UI.
- **Presentation:** The reader turns on and scans for a symbol when it detects motion. When the reader detects no motion, the LED aimer and the lights turn off. The reader relies on an internal timing mechanism to acquire images. Adjust the mechanism by configuring the following:
 - Enable the **Detect Motion** toggle to activate the reader when it detects motion.
 - Choose the **Timeout** when the reader turns off the LED aimer and lights after a set period of no motion.
 - **Sensitivity:** Choose how sensitive the trigger is to motion, from Low to Ultra High.
 - Enable **Don't reread same code based on symbology** to avoid reading multiple codes with the same symbology.
 - Enable **Never read same code twice in a row** to prevent the reader from rereading the same code in one image.
 - **Don't reread last N codes** prevents the reader from reading codes that were read in the last N number of reads. If you provide a value of 0, the option is disabled. The option applies to all read codes within one trigger sequence.
 - The **Delay Mode** option allows you to set a code re-reading delay either the **After First Read** or the **After Last Read**. With **Code reread delay**, you can specify the delay between read attempts. Providing a non-zero value for this delay can help prevent data from

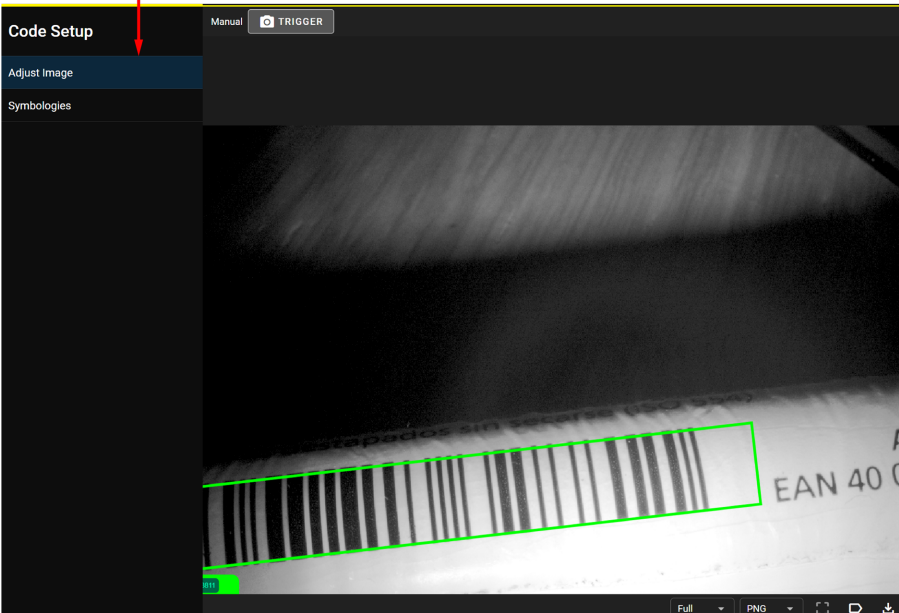

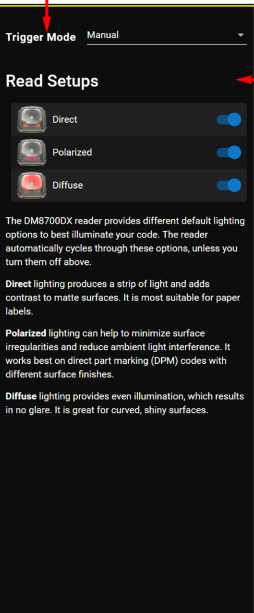

3

DM8700DX models only. Enable or disable the following lighting types.


- **Direct** lighting produces a strip of light and adds contrast to matte surfaces. It is most suitable for paper labels.
- **Polarized** lighting can help to minimize surface irregularities and reduce ambient light interference. It works best on direct part marking (DPM) codes with different surface finishes.
- **Diffuse** lighting provides even illumination, which results in no glare. It is great for curved, shiny surfaces.

Read Setups for Different Applications

Different setups work better with different surfaces or codes.


Labeling Reading Setup

Label reading are printed codes. To set up label reading on your reader, enable **Direct**. **Direct** lighting adds contrast to matte surfaces and is most suitable for paper labels.

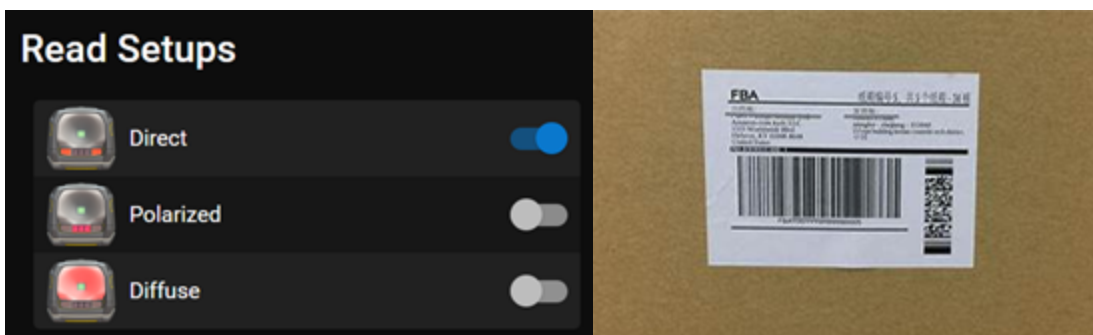


Direct Part Mark (DPM) Reading Setup

DPMs are markings that appear directly on a part or surface, for example on metal or ceramics. To set up DPM reading on your reader, enable **Polarized** and **Diffuse**. **Polarized** lighting minimizes surface irregularities, while **Diffuse** lighting provides even illumination with no glare.

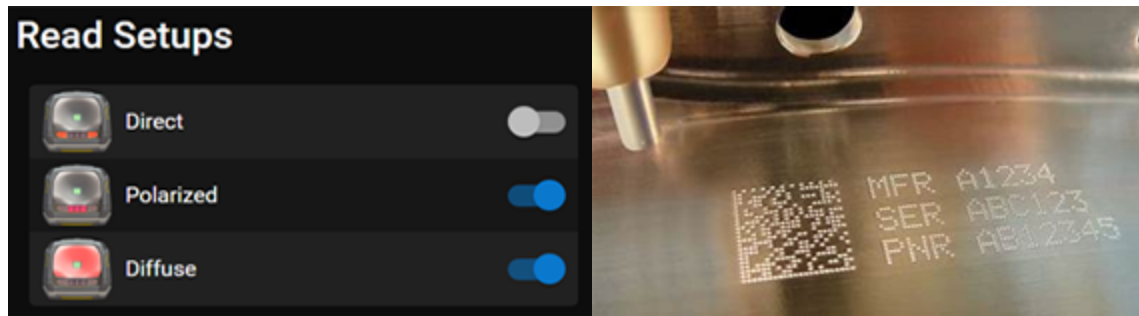

Symbologies

In the **Symbologies** substep, you can configure the barcodes that your reader recognizes.

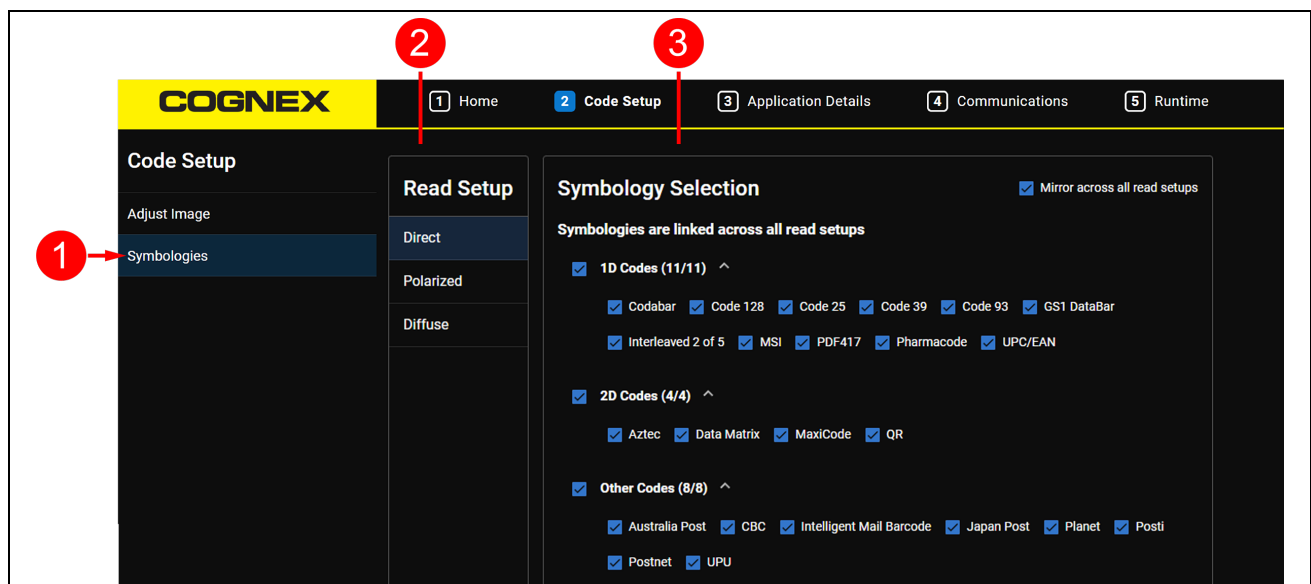

Number	Element
1	Select the Symbologies substep to configure the barcodes your reader recognizes.
2	The available read setups: • Direct • Polarized • Diffuse Different read setups can have different symbologies enabled.
3	The barcodes available for your reader to recognize. Select or deselect a barcode by checking the box next to the symbology.

Application Details

The **Application Details** step allows you to configure the details of your application. Follow the substeps in the menu on the left side to configure your application.

Data Validation

The **Data Validation** substep allows you to confirm that the data encoded by a symbol is in the correct format for a particular company, industry, or international standard. The settings shown on the page depend on the **Validation Type** you choose.

Application Details

Data Validation

Data Formatting

1

Code Type

Data Matrix

QR Code / MaxiCode / Aztec Code

DotCode

1D / Stacked / Postal

2

Data Validation

Validation Type

☒ None ☐ ISO ☐ GS1 ☐ Match String ☐ Pattern Matching

Validation Failure Action

Failure Action

Transmit annotated decoded string

☐ Append CR/LF

Number	Element
--------	---------

Application Details

Data Validation

Data Formatting

1

Code Type

Data Matrix

QR Code / MaxiCode / Aztec Code

DotCode

1D / Stacked / Postal

2

Data Validation

Validation Type

☒ None ☐ ISO ☐ GS1 ☐ Match String ☐ Pattern Matching

Validation Failure Action

Failure Action

Transmit annotated decoded string

☐ Append CR/LF

1

Select the **Code Type** and assign a **Validation Type** to it.

- Use the **None** option if there is no need for any validation type.
- Use the **ISO** option to specify an ISO standard for the strings.
- Use the **GS1** to specify an application identifier for the strings.
 - In addition to the list of specific AIs that you can select, the following special tokens are available:
 - **<AI(.)>** to signify AI
 - **<AI(*)>** for an arbitrary number of AIs
 - DataMan software supports GS1 Digital Link but only for syntax checking. With GS1 Digital Link enabled, the reader ignores any specified pattern, as if the pattern was set to **<AI(*)>**.
- Use the **Match String** option to specify an exact string to match against the string encoded by the symbol. Only symbols containing a string that matches the specified string generate a **Pass** result.
- Use the **Pattern Matching** option to input a regular expression to confirm if the data string includes a specific string of characters.

i

Note: The **Match String** function is case sensitive.

Application Details

Data Validation

Data Formatting

Code Type

Data Matrix

QR Code / MaxiCode / Aztec Code

DotCode

1D / Stacked / Postal

Data Validation

Validation Type

☒ None

☐ ISO

☐ GS1

☐ Match String

☐ Pattern Matching

Validation Failure Action

Failure Action

Transmit annotated decoded string

☐ Append CR/LF

2


If a code fails validation, you can configure the reader to output a specific string in the **Outputs** substep.

Choose one the following options for the Validation Failure Action:

- **Transmit "Validation Failure"**: The reader outputs the string *"Validation Failure"* after a code fails validation.
- **Transmit "Validation Failure" + decoded string**: The reader outputs the string *"Validation Failure"* followed by the complete decoded string.
- **Transmit "Validation Failure" + quoted decoded string**: The reader outputs the string *"Validation Failure"* followed by the quoted part of the decoded string.
- **Transmit annotated decoded string**: The reader outputs the decoded string along with information on the error type and error location in the string.
- **Transmit nothing**: The reader outputs no information when data validation fails.

Data Formatting

In the **Data Formatting** step, you can construct a customized output string using pre-defined building blocks. You can also test your output before proceeding to the next step.

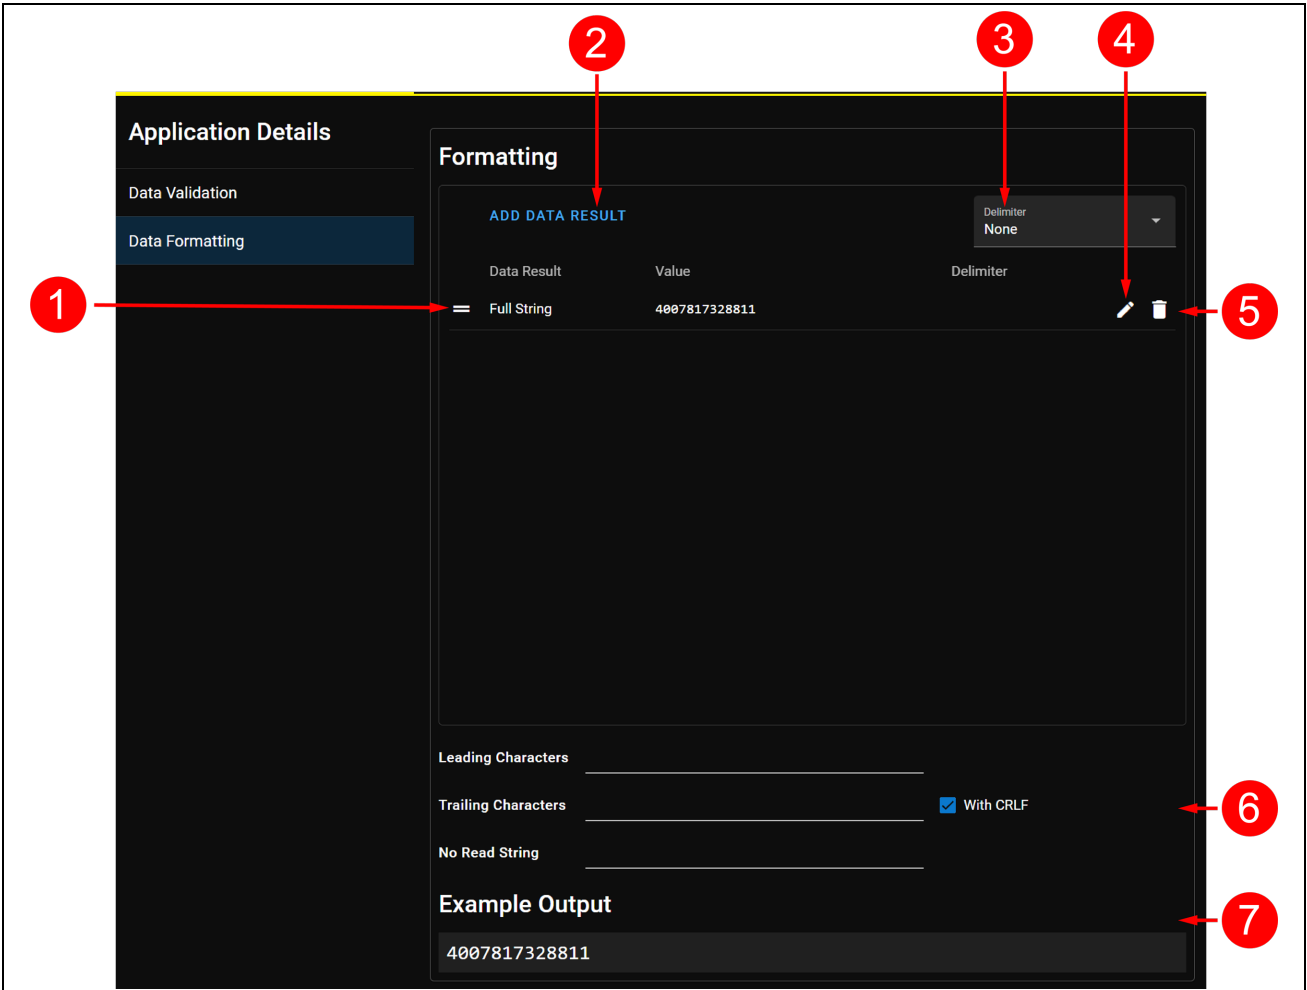

Number	Element
1	Reorder your data by dragging items to their new position.
2	Click Add Data Result to add a new item to the data formatting.
3	Click the Delimiter dropdown to select the delimiter. You can choose from the following: • None • Space • Comma • Tab • Label • XML

Application Details

Data Validation

Data Formatting

2

3

4

5

6

7

1

Formatting

ADD DATA RESULT

Data Result	Value	Delimiter
Full String	4007817328811	None

Leading Characters

Trailing Characters

No Read String

Example Output

4007817328811

4

Click the pencil icon to edit your data results.
You can write and customize a more complex data result, such as skipping several characters in the middle and displaying all remaining characters.

Edit Data Result

Simple

Start at character

1

End at character

4

Advanced

Extent

1-4

e.g. "1,4-" for the first character and characters 4 to end

CANCEL

SAVE DATA RESULT

The screenshot shows the 'Application Details' interface. On the left is a sidebar with 'Data Validation' and 'Data Formatting' (highlighted with a red circle 1). The main area is titled 'Formatting' (highlighted with a red circle 2). It contains an 'ADD DATA RESULT' button (highlighted with a red circle 3). Below this is a table with columns 'Data Result', 'Value', and 'Delimiter'. The first row shows 'Full String' as the Data Result, '4007817328811' as the Value, and 'None' as the Delimiter (highlighted with a red circle 4). To the right of the table are edit and delete icons (highlighted with a red circle 5). Below the table are input fields for 'Leading Characters', 'Trailing Characters', and 'No Read String', along with a 'With CRLF' checkbox (highlighted with a red circle 6). At the bottom is an 'Example Output' field showing '4007817328811' (highlighted with a red circle 7).

5	Click the trashbin icon to delete your data results.
6	Define the leading characters, trailing characters, and No Read string you want to use.
7	Make sure to review your final output in the Example Output field before moving on to the next step. To see the example output, trigger the reader first.

Data items to construct your output string:

Category	Data	Description
Result	Full string	All of the characters encoded in the symbol.
	Sub-string	A sub-string of the characters encoded in the symbol. You must specify a range for the sub-string when using this data. In Simple mode, you have to provide the index of starting and ending characters to construct the sub-string. In Advanced mode, you can provide a range, such as <i>1-3,5,8,10-</i> , for selecting the characters from the full string.
	Symbology	The symbology of the decoded symbol.

Formatting	Space	A space character.
	CR/LF	Carriage Return with Line Feed.
	Tab	A tab character.
Result Details	Symbology Identifier	The symbology identifier as specified by ISO/IEC 15424:2008.
	Symbol Size	The size of the symbol in pixels.
	Module Size	The width or height, in pixels, of each module in the symbol.
	Code Position	The image coordinates of each corner of the decoded symbol.
	Code Center	The image coordinates of the center of the decoded symbol.
	Code Orientation	The orientation of the decoded symbol reported in degrees. Clockwise rotations of the decoded symbol are indicated as positive changes in orientation.
	Contrast	A value, between 0 and 1, to indicate the total amount of contrast within the decoded symbol. A high value indicates the light and dark modules in the symbol have a wide range of grey values, while a low value indicates the light and dark modules consist of similar grey values.
	Unused Error Correction	The amount of available unused error correction in the symbol. Error correction is a method of reconstructing or replacing data that is lost through symbol damage. A value of 100 is ideal. A 1D symbol always returns -1.
TruCheck™	TruCheck™ Application Standard Name	The name of the application standard that is used for grading the code.
	TruCheck™ Application Standard Result	The result based on the application standard.
	TruCheck™ Grading Standard Name	The name of the grading standard.
	TruCheck™ Overall Grade Letter	The letter of the overall grade, for example, A.
	TruCheck™ Overall Grade Value	The value of the overall grade, for example, 3.9.
	TruCheck™ XDimension (mil)	The value of the custom X dimension in mils.

Metadata	Input string	The received serial or Ethernet input string.
	Passed Validations	The number of validation attempts the decoded symbol passed.
	Failed Validations	The number of validation attempts the decoded symbol failed.
	Result source	The name of the reader.
	Code Quality Grade	The grade that the code receives during validation.
Timing	Decode time	The amount of time, in milliseconds, it took the reader to decode the symbol. This period of time does not include image acquisition, pending image processing, communication time and additional processing such as data formatting.
	Trigger time	The amount of time, in milliseconds, that elapses between receiving the trigger and completing the decode operation.
	Filter time	The duration of filtering in milliseconds.
Timestamp	Trigger Creation Local Time	The local time when the reader created the trigger.
	Trigger Creation UTC Time	The UTC time when the reader created the trigger.
	Trigger Execution Local Time	The local time when the reader executed the trigger.
	Trigger Execution UTC Time	The UTC time when the reader executed the trigger.
	Image Acquisition Local Time	The local time when the reader acquired the image of the symbol.
	Image Acquisition UTC Time	The UTC time when the reader acquired the image of the symbol.
	Subresult Creation Local Time	The local time when the reader created the subresult.
	Subresult Creation UTC Time	The UTC time when the reader created the subresult.
	Current Local Time	The current local time.
	Current UTC Time	The current UTC time.

Communications

The **Communications** step allows you to configure the communication protocols of your reader.

The available communication settings depend on the communication of your reader. For Ethernet, you can configure the industrial communications protocols for communicating to your PLC.

Industrial Ethernet Settings

1. Select **Industrial Ethernet**.
2. Select the Industrial Protocol you want to use.
3. Turn on the **Station Name** toggle and change the name to display on the PLC.
4. Click **Apply** to save your changes.
5. If you want to set the configuration back to default, click **Revert**.

Note: To change the IP address, click **Manage Network Settings** or open Network Settings from the **Settings** panel.

Serial Settings

Protocols

Serial

HID

Serial Settings

Match the serial settings of the reader to the device you are connecting to

Baud Rate

115200

Data Bits

8

Stop Bits

2

Parity

None

Handshake

Off

REVERT

APPLY

1. Select **Serial** to configure the Serial settings.
2. Change the RS-232 settings to match the external device you are connecting to.
3. Click **Apply** to save your changes.
4. If you want to set the configuration back to default, click **Revert**.

HID Settings

Protocols

Serial

HID

HID Settings

Human Interface Device (HID) outputs the read string data as keyboard input to a PC

☒ Enable HID interface

Keyboard language
English (US)

Inter-character delay
1000 ms

Keyboard report interval
100 ms

APPLY

1. Select **HID** to configure the read data string output.
2. Click the **Enable HID interface** toggle and set your configuration.
3. Click **Apply** to save your changes.

Telnet & Network Client

Protocols

Telnet & Network Client

Serial

HID

Telnet & Network Client Settings

Configure TCP/IP and Ethernet connection options

Telnet Port 23

☒ Network Client

Host Address : 1000

REVERT

APPLY

To use Telnet:


1. Configure the **Connection Port** to be used for Telnet communication.
2. Click **Apply** to save your changes.

To use the network client functionality:


1. Enable the **TCP Client** toggle.
2. Provide the **Server Address** of the network device you want to connect to the reader.
3. Click **Apply** to save your changes.

Runtime


The **Runtime** step allows you to track the performance of the reader.

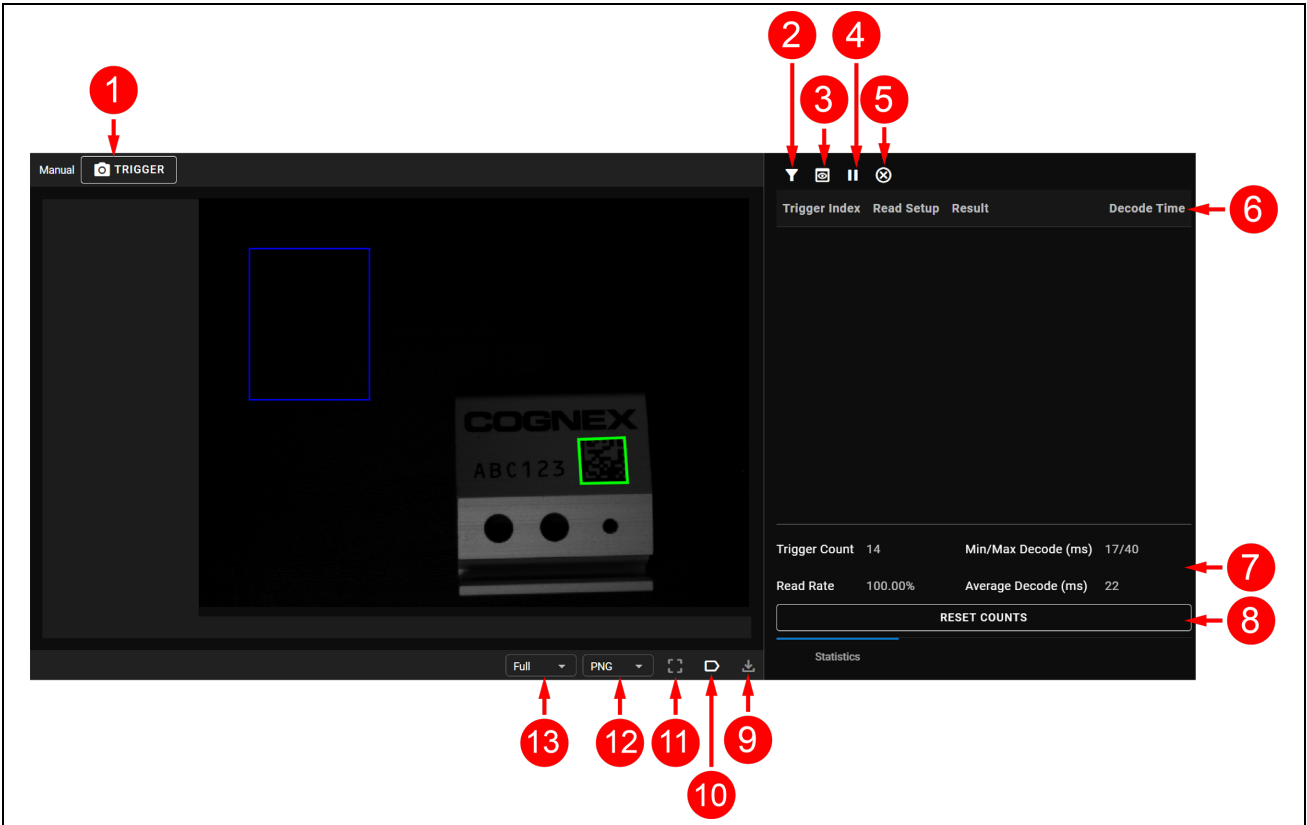

Number	Element
1	The Manual Trigger button triggers image acquisition through the WebUI.
2	The Filter button filters the results. You can choose from the following: • Good Read • No Read • Validation Error Click Clear Filters to delete the filters.
3	Click Display Configuration for more detailed status information.
4	You can play, pause, or resume the incoming result data. When you select a result image, the display pauses so the result list does not update if new results arrive, until you click Play again.
5	Click to clear results.

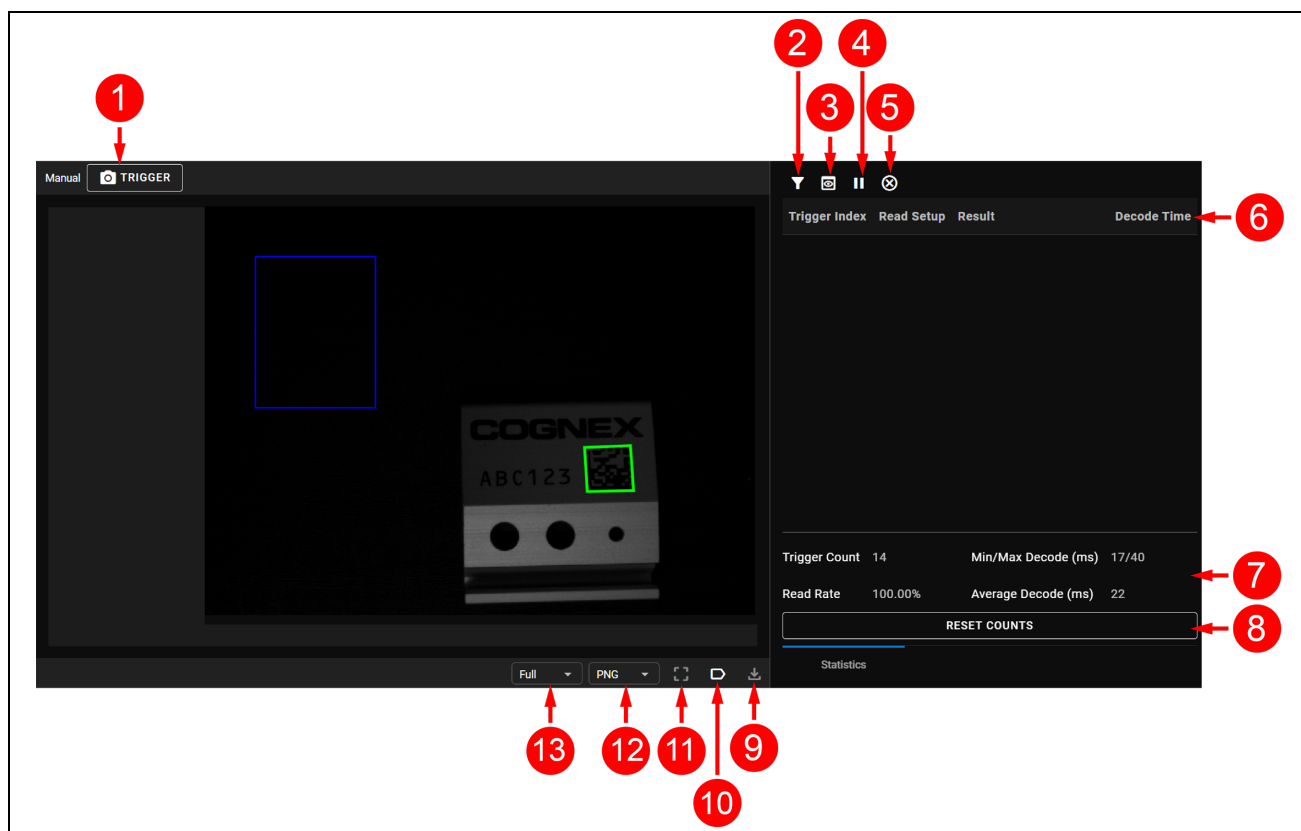

6	Result information: - The result trigger index is the value of reference of the stored data. - The read setup shows the type of lighting. - The result shows how many codes are found. - The result decode time is how long it takes for the reader to decode the symbology.
7	The results display. You can customize this table by clicking Display Configuration .
8	Click Reset Counts to reset the results.
9	The icon to download the full resolution image. The downloaded file format is bitmap (BMP).
10	Click to display the result on the image.
11	The icon to fit the image to your screen.

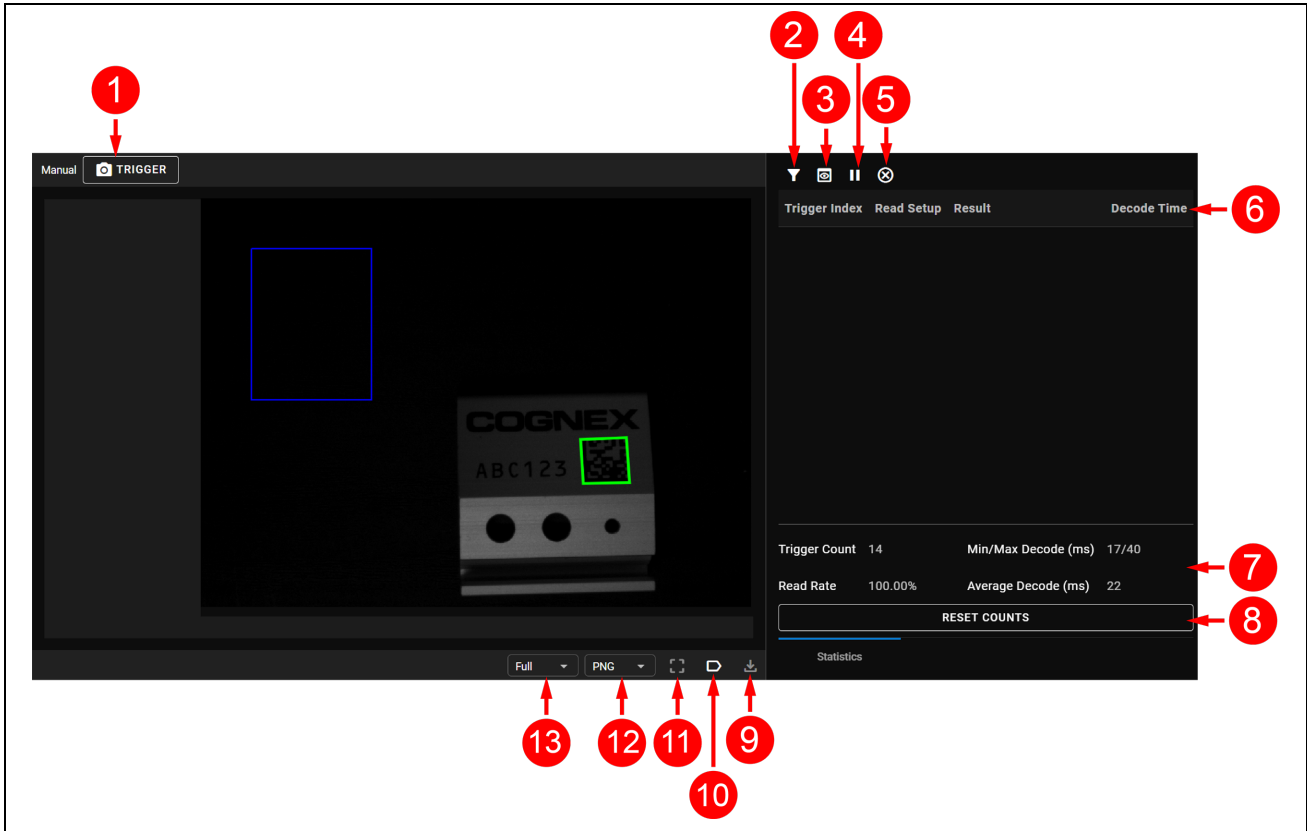

12	The image format the reader transfers to the display. A compressed image format takes up less bandwidth and can allow for a higher display update frequency. The default setting is PNG. You can choose from the following formats: • BMP • JPEG • PNG
13	The image resolution the reader transfers to the display. A lower image resolution takes up less bandwidth and can allow for a higher display update frequency. You can choose from the following: • Full • Quarter • 1/16 • 1/64

Settings

Overview

In the **Overview** tab of **Settings**, you can set up the language and theme of the WebUI. You can also customize the behavior of the in-application help.

Configure the language and appearance of the WebUI

☐  Deutsch
 ☒  English
 ☐  Español

☒  Language
 ☐  Français
 ☐  Italiano
 ☐  日本語

☐  한국어
 ☐  Polski
 ☐  Português do Brasil

☐  中文

☒  Theme
 ☒ COGNEX DARK 
☐ COGNEX LIGHT 

<> Codepage Symbology Default 
☐ Ignore ECI Indicators

☒  Help
 ☐ Show walkthrough content on first visit

RESET SEEN WALKTHROUGHS

Configure Codepage

You can change the codepage to be able to decode non-ASCII characters.

Click **Symbology Default** to open the drop-down of available codepages and select one of the options. Read at least one non-ASCII code and use the **Decoded Result** column to help determine which codepage is the right one for your reading. You can also use the **Filter** field to narrow down the list of available options or disable the **Show Invalid Decodings** checkbox to only show valid codepages.

[illegible]

By default, the WebUI recognizes Extended Channel Interpretation (ECI) indicators compliant with AIM ECI standards. When reading compliant codes, this allows the WebUI to automatically identify and use the correct codepage. Check the **Ignore ECI Indicators** box to disable support for ECI indicators, so the WebUI uses the configured codepage instead.

Note: The WebUI has limited support for non-codepage ECI indicators. The WebUI still attempts to display codes with these indicators, but correct interpretations are only possible in the expected downstream program.

Licenses

In the **Licenses** tab of **Settings**, you can view and manage the Feature Keys of your reader.

To get access to a feature, click **Create Feature License Request** and submit the file to Cognex. Click **Import New Feature License** to upload the returned key.

Current Licenses IDQuick, IDMax, BarCode, PostalCode, 2DCode, Validation, ImageDownload, Ethernet, FFP, Scripting, PowerGrid, ImageFiltering, Omnidirectional, LadderAndPicket, DirectLight

CREATE FEATURE LICENSE REQUEST

Import New Feature License 

Ready

SUBMIT FILE

Date & Time

In the **Date & Time** tab of **Settings**, you can configure date and time settings for your reader by clicking on **Enable Date & Time Settings**.

Configure the date and time settings of the device

Enable Date & Time Settings ☒

Current Time 2/17/2019, 6:16:51 AM

Timezone UTC 

SNTP Servers IP Address or Host Name

= _____

= _____

If you choose **SNTP Service**, you can configure clock time sources between your servers. Choose **Timezone** and enter the IP Addresses or Host Names of the servers.

Note: You have to configure an SNTP server to add timestamps to the output string. For more information on the output string, see [Data Formatting on page 17](#).

Sound & Haptic

In the **Sound & Haptic** tab of **Settings**, you can configure whether the reader vibrates or produces sound. You can also customize the pitch of the sound output for various events.

Customize the physical feedback of the reader

Vibration ☒

Beeper ☒

Beeper Pitch

Read	Low	Medium	High
Read (offline)	Low	Medium	High
No read	Low	Medium	High
Validation failure	Low	Medium	High

Password Protection

In the **Password Protection** tab of **Settings**, you can set up a password for the reader. When you enable password protection and lock the WebUI, users cannot modify the reader configuration without a password. Use this feature to protect your settings from unwanted changes.

Password Protection ☒

New Password

Confirm Password

[REVERT](#) [SAVE PASSWORD](#)

Turning on Password Protection


To turn on password protection:

1. Enable the **Password Protection** toggle.
2. Enter the new password in the **New Password** and **Confirm Password** fields.
3. Click **Save Password**.

Locking the User Interface

To lock the user interface:

1. Turn on password protection.
2. Click on the lock icon at the top right of the screen. The **Lock the User Interface** dialog appears.

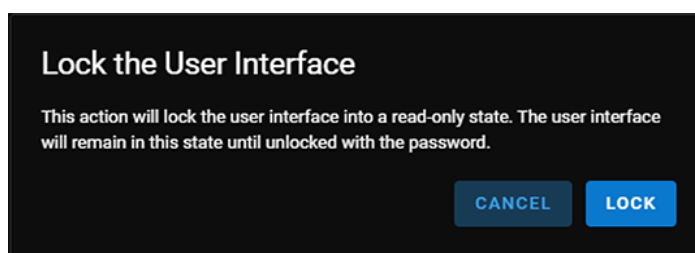


3. Click **Lock**.

The user interface is locked, and you can only view the **Runtime** step.

To unlock the user interface:

1. Exit the **Runtime** step.

The **Authentication Required** dialog appears:

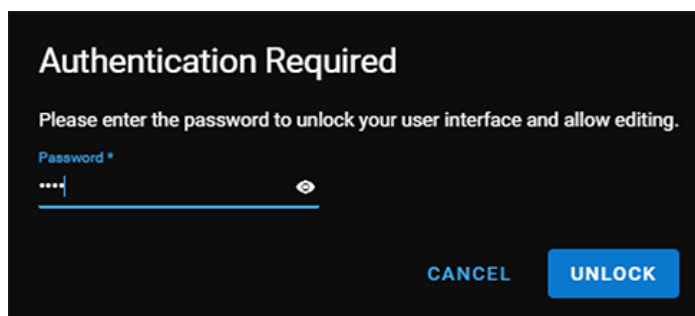

2. Fill in the **Password** field and click **Unlock**.

Note: The WebUI locks you out after a few minutes of inactivity.

Forgotten Password

Reset your DataMan reader to factory settings.

Removing the Password

Disable the **Password Protection** toggle, then click **Turn off** on the pop-up.

Network Settings

Note:

This setting option is only available on the following reader models:



- DataMan 80
- DataMan 280
- DataMan 290

In the **Network Settings** tab of **Settings**, you can configure network settings for your reader. To save network settings, click on **Apply**.

Configure network settings for the device

Host Name

DHCP ☒

IP Address

Subnet Mask

Default Gateway

DNS Server

Domain Name

Ready

REVERT **APPLY NETWORK SETTINGS**

Firmware Update

In the **Firmware Update** tab of **Settings**, you can update the firmware of your reader by uploading the firmware file from your PC and then clicking on **Update Firmware**.

Turn on the **Backup** toggle to save a backup file before the update.

Update the device firmware

Host Name TestDevice-Sensor

Current Firmware Version 24.1.0-4935

Backup ☒

Select Firmware File 

Ready

UPDATE FIRMWARE

Backup Device

In the **Backup** tab of **Settings**, you can save the reader configuration to a backup file by clicking on **Save Backup**.

Save the device configuration to a backup file

Host Name

Firmware Version

Ready

SAVE BACKUP

Restore Device

In the **Restore Device** tab of **Settings**, you can restore the reader from a backup file by selecting your backup file and clicking on **Restore**.

If you enable the **Restore Network Settings** toggle, the [Secure Connection on page 39](#) settings are copied from the backup file to the target reader.

Restore the device from a backup file

Host Name

Firmware Version

IP Address

Restore Network Settings ☐

Select Backup File 

Ready

RESTORE FROM BACKUP

Factory Reset

In the **Factory Reset** tab of **Settings**, you can reset the reader to factory settings by clicking **Factory Reset**.

Reset the device to factory defaults

Host Name

Firmware Version

Ready

FACTORY RESET

Device Log

In the **Device Log** tab of **Settings**, you can access the device log of your reader.

View logged device events and history




CLEAR LOG
Filter

Level	Created ↓	Message
INFO	2025-06-18 13:23:17.590	Device log downloaded.
INFO	2025-06-18 13:23:17.574	Device log cleared.

The reader generates logged events with timestamps. The WebUI displays these events in the device log.

The reader fetches the device log automatically when you open the **Device Log** tab. Click **Refresh** to retrieve any updates manually, or the **Play** button to start receiving updates automatically.

The device log contains the following message types:

- **Info**: general information about the reader.
- **Warning**: a non-critical issue.
- **Error**: a problem that needs to be resolved.


 **Note:** Error events trigger the error LED on the reader. Configure the pulse duration of the error LED on the **Outputs** substep.

The following actions are available in the **Device Log** tab:

- **Download**: download the log in .csv format.
- **Refresh**: get the latest log entries.
- **Clear**: remove all entries from the log.
- **Filter**: input any string to filter the displayed log entries.
- **Sort**: click on a column header to sort the log entries in descending or ascending order.

Field Diagnostics

In the **Field Diagnostics** tab of **Settings**, you can save diagnostics data by clicking on **Save Diagnostic Data**. If necessary, you can send this data to Cognex Customer Support. The tab also displays the temperature of the image sensor on supported systems.

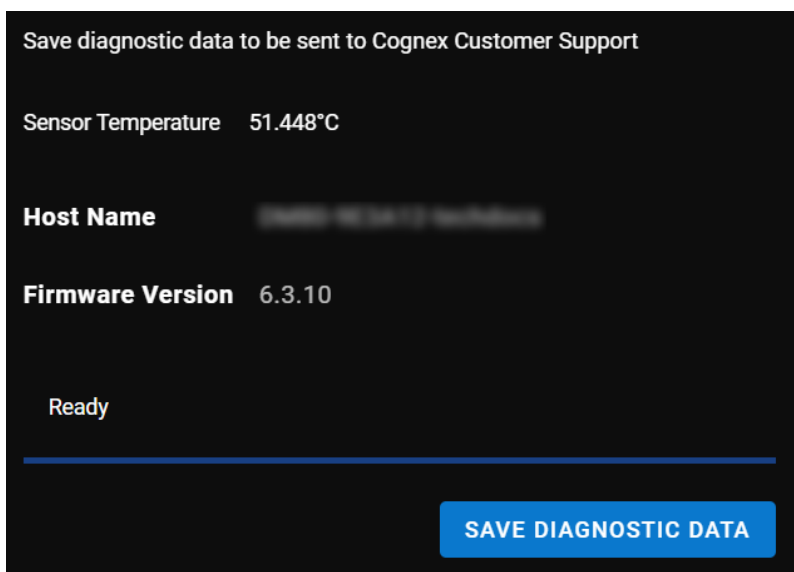

Save diagnostic data to be sent to Cognex Customer Support

Sensor Temperature 51.448°C

Host Name [blurred]


Firmware Version 6.3.10

Ready

SAVE DIAGNOSTIC DATA

Reboot

In the **Reboot** tab of **Settings**, you can reboot the device.

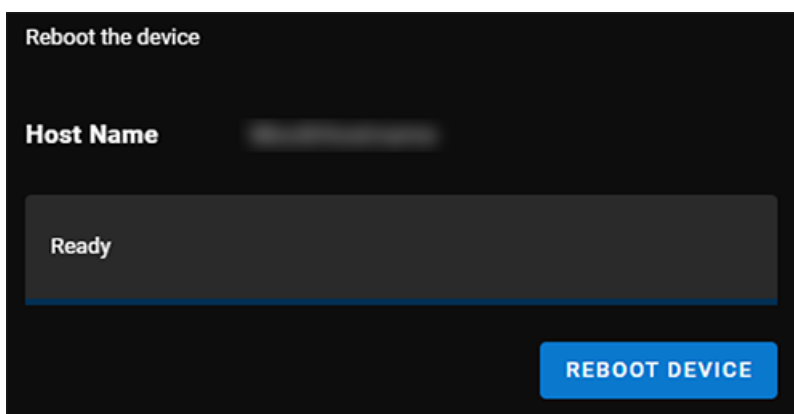

Reboot the device

Host Name [blurred]

Ready

REBOOT DEVICE

After clicking **Reboot Device**, the screen confirms that the reader initiated the reboot. Rebooting takes a few seconds to finish.

Secure Connection

Note: The **Secure Connection** settings tab is only available on DM80 and DM280 readers.

In the **Secure Connection** tab of **Settings**, you can set up a secure communication channel between the reader and the browser by uploading and using an SSL certificate.

Configure a secure connection between the device and the browser

Applied SSL Certificate

None Applied

Upload SSL Certificate

Server Certificate	Server Certificate *	
Intermediate Certificate (optional)	Intermediate Certificate	
Certificate Key	Certificate Key *	

Status

UPLOAD CERTIFICATE

The **Applied SSL Certificate** shows you which SSL certificate you are currently using.

To upload an SSL certificate, click on the **Upload** button and select the following files from your computer:

- **Server Certificate**
- **Intermediate Certificate (optional)**
- **Certificate Key**


The **Status** shows the statuses of the uploaded files.

Click on **Upload Certificate** to upload the chosen files.

Note: If you delete your certificate, your connection is no longer secure. In this case, you need to manually remove the "s" from the protocol in the URL to reconnect to the reader.

Image Viewer

In the **Image Viewer** tab of **Settings**, you can configure and open the Image Viewer, which is accessible outside of WebUI. The Image Viewer is a HMI that displays the latest image captured by the reader with optional overlay graphics. The Image Viewer is optimized to also work with older browsers.

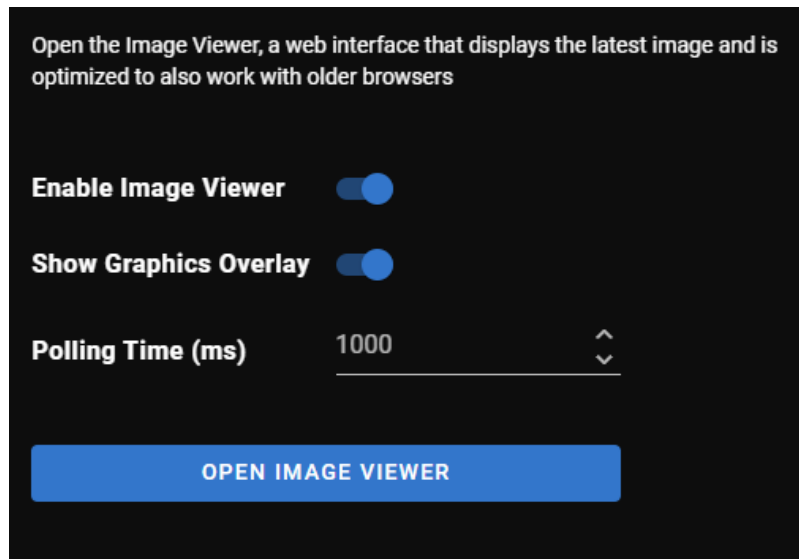

The **Polling Time (ms)** defines how often the web interface displays a new image. The minimum value is 500 ms. Modern browsers ignore the polling time and display the latest trigger.

