

DM100 Configuration Codes (v3.0)

Function	Value	Code
Product Settings	Reset Scanner to Factory Defaults	
Reset	Reboot Scanner	
Diagnostics	Output Diagnostic String	
Trigger Type	Enable Single (external)	
	Enable Presentation (internal)	
	*Enable Manual (button)	
	Enable Burst (external)	
	Enable Self (internal)	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Enable Data Matrix	
	Disable Data Matrix	
	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	
	Disable UPC/EAN	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Enable Code 39	
	Disable Code 39	
	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	
	Disable Codabar	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Enable Pharmacode	
	*Disable Pharmacode	
	Enable PDF417	
	*Disable PDF417	
	Enable RSS	
	*Disable RSS	
	Enable Micro PDF417	
	*Disable Micro PDF417	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Enable EAN.UCC Composite	
	*Disable EAN.UCC Composite	
	Enable POSTNET	
	*Disable POSTNET	
	Enable PLANET	
	*Disable PLANET	
	Enable Japan Post	
	*Disable Japan Post	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Enable Australia Post	
	*Disable Australia Post	
	Enable UPU	
	*Disable UPU	
	Enable USPS OneCode	
	*Disable USPS OneCode	
1D Symbology Settings	Enable Use Target Decoding (simulates laser scanning)	
	*Disable Use Target Decoding (simulates laser scanning)	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Data Validation / Data Formatting	Enable DoD UID Validation with UII Output (for Data Matrix only)	
	*Disable DoD UID Validation with UII Output (for Data Matrix only)	
Non-Printable Characters	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
Wake-up Message	Enable Output Diagnostic String on Wake-up	
	*Disable Output Diagnostic String on Wake-up	
Communication Settings	Enable Multi-Port (RS-232 Sharing)	
	* Disable Multi-Port (RS-232 Sharing)	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Connection Type	*RS-232 / USB-COM	
	USB-Keyboard	
RS-232 Baud Rate	9600 BPS	
	19200 BPS	
	38400 BPS	
	57600 BPS	
	*115200 BPS	
RS-232 Word Length	7 Data, 1 Stop, Even	

DM100 Configuration Codes (v3.0)

Function	Value	Code
RS-232 Word Length	7 Data, 1 Stop, None	
	7 Data, 1 Stop, Odd	
	7 Data, 2 Stop, Even	
	7 Data, 2 Stop, None	
	7 Data, 2 Stop, Odd	
	8 Data, 1 Stop, Even	
	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	

DM100 Configuration Codes (v3.0)

Function	Value	Code
Keyboard Country	*USA	
	Germany	
	France	
	Spain	
	Japan	

* - default setting