

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Products Settings	Reset Scanner to Factory Defaults	
Reset	Reboot Scanner	
Diagnostics	Output Diagnostic String	
Setup	*Enable Setup 1 Only	
	Enable Setup 2 Only	
	Enable Setup 3 Only	
	Enable Setup 4 Only	
Symbology Settings	*Enable Data Matrix	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Disable Data Matrix	
	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	
	Disable UPC/EAN	
	*Enable Code 39	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Disable Code 39	
	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	
	Disable Codabar	
	Enable Pharmacode	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Disable Pharmacode	
	*Enable PDF417	
	Disable PDF417	
	Enable RSS	
	*Disable RSS	
	Enable Micro PDF417	
	*Disable Micro PDF417	
	Enable EAN.UCC Composite	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Disable EAN.UCC Composite	
	Enable POSTNET	
	*Disable POSTNET	
	Enable PLANET	
	*Disable PLANET	
	Enable Japan Post	
	*Disable Japan Post	
	Enable Australia Post	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Disable Australia Post	
	Enable UPU	
	*Disable UPU	
	Enable USPS OneCode	
	*Disable USPS OneCode	
1D Symbology Settings	*Enable Use Target Decoding (simulates laser scanning)	
	Disable Use Target Decoding (simulates laser scanning)	
Data Validation / Data Formatting	Enable DoD UID Validation with UII Output (for Data Matrix only)	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Data Validation / Data Formatting	*Disable DoD UID Validation with UII Output (for Data Matrix only)	
Non-Printable Characters	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
System Settings	Enable Presentation Mode	
	*Disable Presentation Mode	
Wake-up Message	Enable Output Diagnostic String on Wake-up	
	*Disable Output Diagnostic String on Wake-up	
Connection Type	*RS-232 / USB-COM	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Connection Type	Keyboard Wedge / USB-Keybaord	
	Keyboard Emulation / USB-Keybaord	
RS-232 Baud Rate	9600 BPS	
	19200 BPS	
	*38400 BPS	
	57600 BPS	
	115200 BPS	
RS-232 Word Length	8 Data, 1 Stop, Even	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
RS-232 Word Length	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	
RS-232 Handshaking	*RTS/CTS Off	
	RTS/CTS On	
Keyboard Country	*USA	
	Germany	
	France	
	Spain	

Corded Reader Configuration Codes (v3.0)

Function	Value	Code
Keyboard Country	Japan	

* - default setting