

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Products Settings	Reset Scanner to Factory Defaults	
	Reset Base Station to Factory Defaults	
Reset	Reboot Scanner	
Diagnostics	Output Diagnostic String	
Disconnect	Unlink Bluetooth Connection	
Setup	Enable Setup 1 Only	
	Enable Setup 2 Only	
	Enable Setup 3 Only	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Setup	Enable Setup 4 Only	
Symbology Settings	*Enable Data Matrix	
	Disable Data Matrix	
	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Disable UPC/EAN	
	*Enable Code 39	
	Disable Code 39	
	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	Disable Codabar	
	Enable Pharmacode	
	*Disable Pharmacode	
	Enable PDF417	
	*Disable PDF417	
	Enable RSS	
	*Disable RSS	
	Enable Micro PDF417	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Disable Micro PDF417	
	Enable EAN.UCC Composite	
	*Disable EAN.UCC Composite	
	Enable POSTNET	
	*Disable POSTNET	
	Enable PLANET	
	*Disable PLANET	
	Enable Japan Post	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Symbology Settings	*Disable Japan Post	
	Enable Australia Post	
	*Disable Australia Post	
	Enable UPU	
	*Disable UPU	
	Enable USPS OneCode	
	*Disable USPS OneCode	
1D Symbology Settings	*Enable Use Target Decoding (simulates laser scanning)	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
1D Symbology Settings	Disable Use Target Decoding (simulates laser scanning)	
Data Validation / Data Formatting	Enable DoD UID Validation with UII Output (for Data Matrix only)	
	*Disable DoD UID Validation with UII Output (for Data Matrix only)	
Non-Printable Characters	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
Bluetooth Settings	*Enable Offline Buffering	
	Disable Offline Buffering	
System Settings	Enable Presentation Mode	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
System Settings	*Disable Presentation Mode	
	Enable Never Enter Power Save Mode	
Timeouts	*Disable Never Enter Power Save Mode	
	Enable Output Diagnostic String on Wake-up	
Wake-up Message	*Disable Output Diagnostic String on Wake-up	
	RS-232	
Connection Type	*Keyboard Wedge	
	USB-COM	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
Connection Type	USB-Keyboard	
RS-232 Baud Rate	9600 BPS	
	19200 BPS	
	38400 BPS	
	57600 BPS	
	*115200 BPS	
RS-232 Word Length	7 Data, 1 Stop, Even	
	7 Data, 1 Stop, None	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
RS-232 Word Length	7 Data, 1 Stop, Odd	
	7 Data, 2 Stop, Even	
	7 Data, 2 Stop, None	
	7 Data, 2 Stop, Odd	
	8 Data, 1 Stop, Even	
	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	
RS-232 Handshaking	*RTS/CTS Off	

Cordless Reader Configuration Codes (v3.0)

Function	Value	Code
RS-232 Handshaking	RTS/CTS On	
Keyboard Country	*USA	
	Germany	
	France	
	Spain	
	Japan	

* - default setting