

DM100 Configuration Codes (v3.1)

Function	Value	Code
Product Settings	Reset Scanner to Factory Defaults	
Reset	Reboot Scanner	
Diagnostics	Output Diagnostic String	
Match String Validation	Use Next Code As Match String	
Trigger Type	Enable Single (external)	
	Enable Presentation (internal)	
	*Enable Manual (button)	
	Enable Burst (external)	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Trigger Type	Enable Self (internal)	
Maximum Exposure	1/10000	
	1/7500	
	1/5000	
	1/4000	
	1/3000	
	1/2500	
	1/2000	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Maximum Exposure	1/1500	
	1/1250	
	1/1000	
	1/750	
	1/500	
	1/300	
	1/250	
	1/200	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Maximum Exposure	1/150	
	1/125	
	1/100	
	1/75	
	*1/50	
	1/40	
Symbology Settings	*Enable Data Matrix	
	Disable Data Matrix	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Symbology Settings	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	
	Disable UPC/EAN	
	*Enable Code 39	
	Disable Code 39	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Symbology Settings	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	
	Disable Codabar	
	Enable Pharmacode	
	*Disable Pharmacode	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Symbology Settings	*Enable PDF417	
	Disable PDF417	
	Enable RSS	
	*Disable RSS	
	Enable Micro PDF417	
	*Disable Micro PDF417	
	Enable EAN.UCC Composite	
	*Disable EAN.UCC Composite	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Symbology Settings	Enable POSTNET	
	*Disable POSTNET	
	Enable PLANET	
	*Disable PLANET	
	Enable Japan Post	
	*Disable Japan Post	
	Enable Australia Post	
	*Disable Australia Post	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Symbology Settings	Enable UPU	
	*Disable UPU	
	Enable USPS OneCode	
	*Disable USPS OneCode	
1D Symbology Settings	Enable Use Target Decoding (simulates laser scanning)	
	*Disable Use Target Decoding (simulates laser scanning)	
Data Validation / Data Formatting	Enable DoD UID Validation with UII Output (for Data Matrix only)	
	*Disable DoD UID Validation with UII Output (for Data Matrix only)	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Non-Printable Characters	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
Wake-up Message	Enable Output Diagnostic String on Wake-up	
	*Disable Output Diagnostic String on Wake-up	
Communication Settings	Enable Multi-Port (RS-232 Sharing)	
	* Disable Multi-Port (RS-232 Sharing)	
Connection Type	*RS-232 / USB-COM	
	USB-Keyboard	

DM100 Configuration Codes (v3.1)

Function	Value	Code
RS-232 Baud Rate	9600 BPS	
	19200 BPS	
	38400 BPS	
	57600 BPS	
	*115200 BPS	
RS-232 Word Length	7 Data, 1 Stop, Even	
	7 Data, 1 Stop, None	
	7 Data, 1 Stop, Odd	

DM100 Configuration Codes (v3.1)

Function	Value	Code
RS-232 Word Length	7 Data, 2 Stop, Even	
	7 Data, 2 Stop, None	
	7 Data, 2 Stop, Odd	
	8 Data, 1 Stop, Even	
	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	
Keyboard Country	*USA	
	Germany	

DM100 Configuration Codes (v3.1)

Function	Value	Code
Keyboard Country	France	
	Spain	
	Japan	
	Alt Key Combo	
Alt Key Combo Zero Padding	Enabled	
	*Disabled	

* - default setting