


Technical Bulletin: Factory Reset with FFS

To set defaults, follow these instructions. You will basically be creating a new Shortcut to the TruCheck.exe program file and adding "ffs" to the command line by editing the properties of this shortcut.


First, create the shortcut:

NOTE: You cannot use the Shortcut that is installed originally by the TruCheck installer – instead you must go to Program Files (x86)\Webscan Inc\TruCheck and find TruCheck.exe and right-click and "send to desktop (Create Shortcut)".


1. Open a File Explorer and navigate to the TruCheck.exe software program file: C:\Program Files (x86) \ Webscan Inc\TruCheck
2. Next Right Click on the TruCheck.exe and select Create Shortcut:

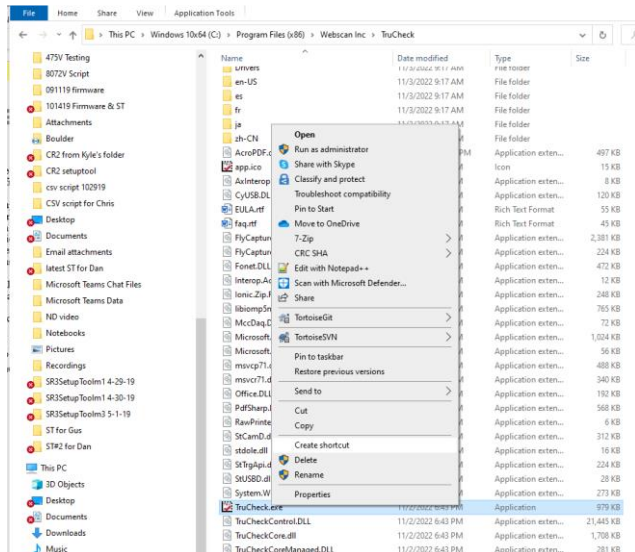

3. When the following message appears, select Yes:

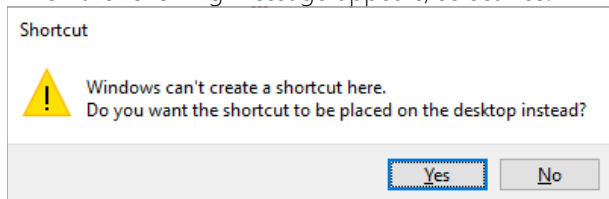

4. Find the TruCheck shortcut on your desktop.
5. Right click on the icon for the Shortcut and select Properties.
6. In the Properties menu, under the Shortcut tab, find the Target field, which will contain:
C:\Program Files (x86)\Webscan Inc\TruCheck

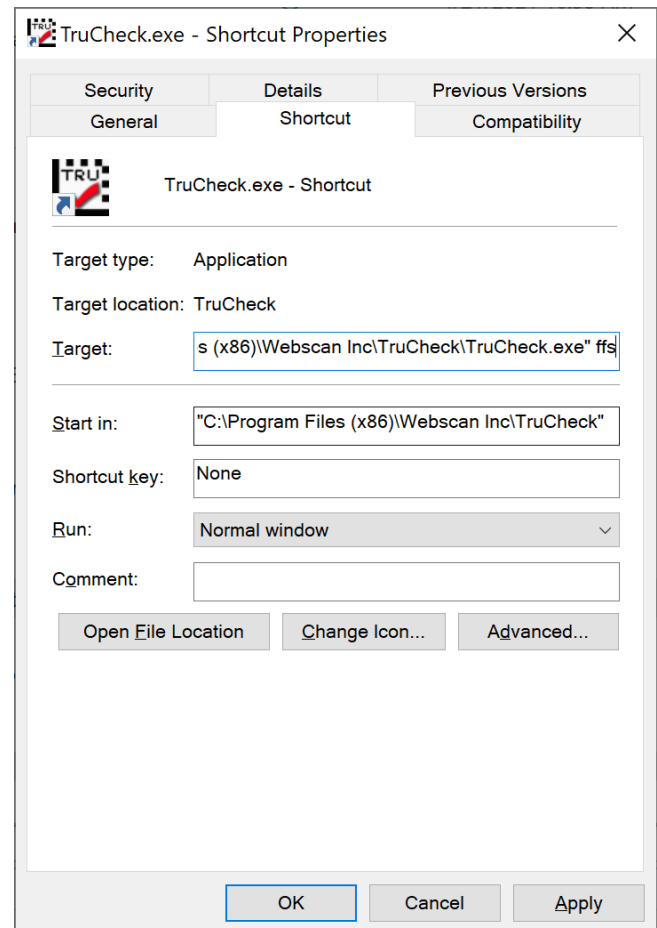

Technical Bulletin: Factory Reset with FFS



Place your cursor in that box, and move it to the very end, after the quote mark. Enter a space character after the quote and then type ffs into the field as shown above. When complete, the field should contain this information exactly as shown:

"C:\Program Files (x86)\Webscan Inc\TruCheck\TruCheck.exe" ffs

9. Select Apply, then OK.

10. Once you have this newly modified shortcut, you can double-click it. The TruCheck software will start up and tell you that it is starting with default settings.

11. Now that the defaults have been set, unfortunately the unit will no longer have its "serial number" and "assembly number" set anymore. Since these are important, you have to set them now. Use the Tech Bulletin: to complete this step.

12. Close the TruCheck software

12. You are done but you should delete the new shortcut that you made, now that you do not need it anymore and so you DO NOT USE IT BY MISTAKE in the future. If you use it, your settings will be wiped out again.

13. Start the TruCheck software using the old regular shortcut, not the new one that you used to reset defaults.

14. Now you can set up any of the settings that you need to be different from the defaults, such as File Save path, and any grading options, etc.

***When resetting to defaults you will also need to reestablish a few things.**

[Reassign Assembly Number](#)

[Advanced Calibration](#)

[Adjusting the Laser Spot Target Position](#)